 


INSTRUCTION MANUAL

FDP12A/FDP15A 2 Way Active Speaker

Part Number 178.796FI/178.799FI

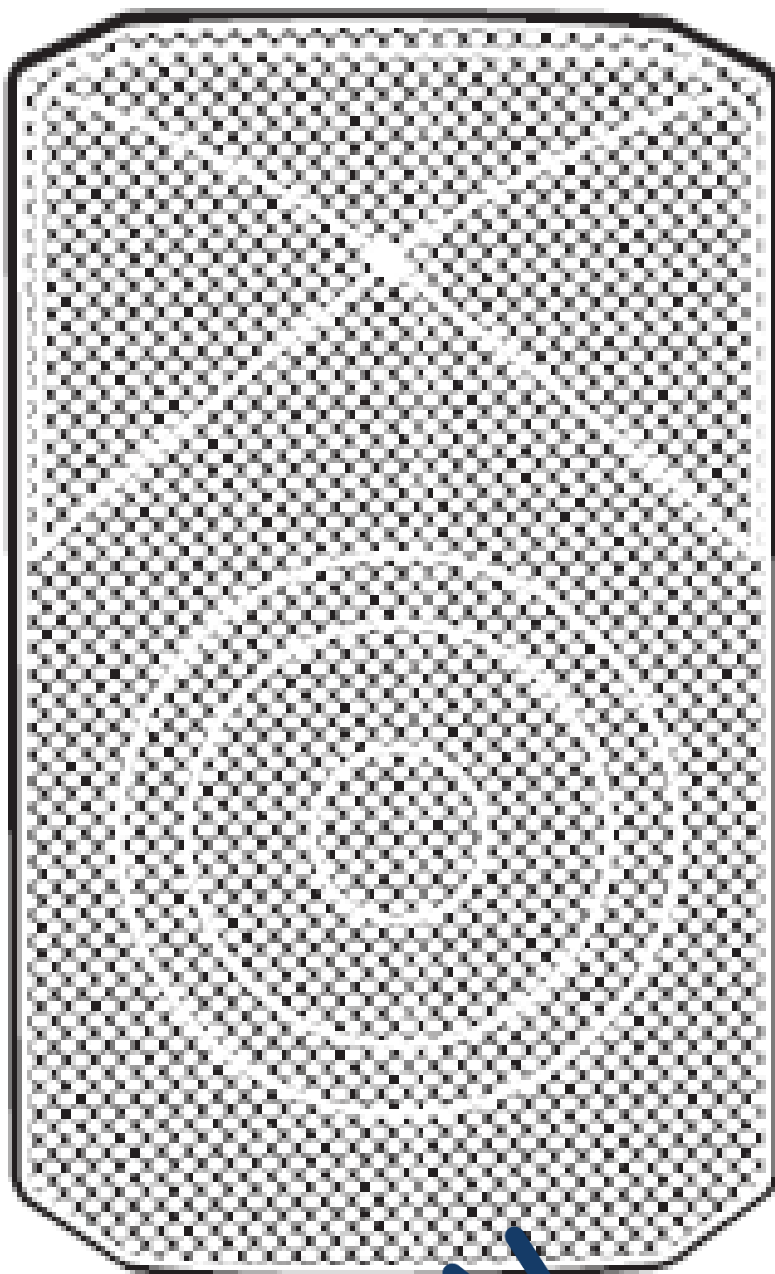

Made in China

Introduction

Thank you for choosing the Filo FDP12A/FDP15A Active speaker. To make the most of its features, please read this manual thoroughly before use.

Please ensure that you read the manual thoroughly before using the product. Adhere to the instructions to avoid invalidating the warranty. Take all necessary precautions to prevent fire and electrical shock. Repairs should only be conducted by a qualified technician to avoid electrical shock. Retain this manual for future reference.

- Prior to usage, please consult a specialist.
- It is normal for a smell to occur when the device is first switched on.
- Do NOT open the housing under any circumstances.
- To prevent shock and malfunction, avoid contact with metal objects or liquids.
- Keep the device away from heat sources and vibrating surfaces.
- Ensure that ventilation holes are not obstructed.
- The device is not intended for continuous use.
- Handle the mains lead with care to avoid damage and shock.
- Always pull the plug, not the lead, when unplugging.
- Do not plug or unplug the device with wet hands.
- Replace damaged plugs or leads with the assistance of a qualified technician.
- If internal parts are visible, do NOT plug in or switch on the device; contact your dealer.
- Avoid exposure to rain and moisture to prevent fire and shock hazards.
- Repairs should only be conducted by a qualified technician.
- Connect the device to an earthed mains outlet (220-240Vac/50Hz) with a 10-16A fuse.
- Unplug the device during thunderstorms or when not in use for extended periods.
- Allow the unit to reach room temperature before switching it on if it has been unused for a long time.
- Do not use the device in humid rooms or outdoors.
- Avoid repeatedly switching the device on and off.
- Keep the device out of reach of children and do not leave it unattended.
- Do not use cleaning sprays on switches; seek specialist advice in case of malfunction.
- Do not force the controls.
- Keep speakers at least 60cm away from computers or TVs.
- If the device has fallen, have it checked by a qualified technician before use.
- Clean the device only with a dry cloth.
- Keep the device away from electronic equipment that may cause interference.
- Use only original spare parts for repairs.
- Switch off the device before unplugging and disconnect all leads and cables before moving it.
- Ensure that the mains lead is not damaged by foot traffic.
- Check the mains lead for damage before each use.
- The mains voltage is 220-240Vac/50Hz; ensure compatibility when traveling.
- Retain the original packing material for safe transport.

Package Contents

- FDP12A/FDP15A active speaker
- Remote control
- IEC power lead
- User manual

Unpacking Instructions



Carefully unpack the box upon receipt. Ensure all parts are present and in good condition. If any parts appear damaged or the package shows signs of mishandling, notify the shipper immediately and retain the packaging material. Save the package and all packaging materials. If the product needs to be returned, it is important to use the original factory box and packaging. If the device has been exposed to drastic temperature fluctuations (e.g., after transportation), do not switch it on immediately. Allow the device to reach room temperature to avoid condensation damage.

Caution

Ensure the mains voltage matches the label on the product. Using a different voltage may cause damage. Connect directly to the mains without a dimmer or adjustable power supply.



Always connect the device to a protected circuit (circuit breaker or fuse) and ensure it is properly grounded to prevent the risk of electrocution or fire.

Additional Notes

- Operate the device in rooms with temperatures between 5°C (41°F) and 35°C (95°F).
- Dispose of electrical products at designated recycling centers.
- Specifications may vary slightly and are subject to change without notice.
- Do not attempt repairs or modifications, as this will invalidate the warranty.
- FiloPro is not liable for injuries or damages resulting from misuse or disregard of warnings.

 
Symbols and Certifications




This symbol alerts users to the presence of high voltages inside the housing, which are powerful enough to pose a risk of electric shock.

Rear Panel

- 1 **EQ Presets:** DSP 4 effects (Live-speech-music-flat)
- 2 **Signal/Limit/Power indicator:** Indicates power or signal distortion
- 3 **Line/Mic input with volume control:** Balanced XLR/6.3 mm Jack socket with level control
- 4 **Line input with volume control:** Balanced XLR/6.3 mm Jack socket with level control
- 5 **Service Data**
- 6 **Master volume:** Used to set master volume level
- 7 **Line out:** Balanced XLR output
- 8 **Power Switch**
- 9 **AC connector**

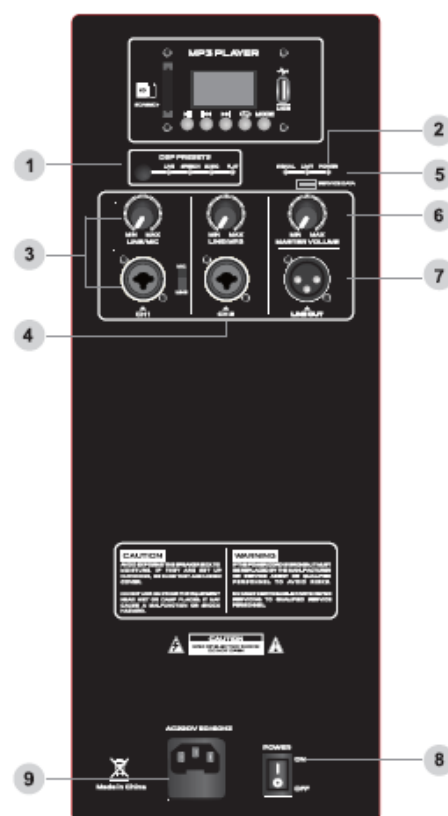


- 1 **SD card slot:** Use it to insert a SD card with Mp3 files.
- 2 **Mode:** Choose an operating mode. The available options are SD and USB.
- 3 **Play/Pause:** Press to play a song or pause while playing a song.
- 4 **Play back options:**
 - Single playback:** Select this to play current song indefinitely.
 - Repeat all:** With this option you can repeat all music.
- 5 **Next/Volume +:** Press once to skip song /press and hold to increase the volume level.
- 6 **Previous /Volume-:** Press once to return to previous song/Press and hold to reduce the volume level.
- 7 **USB/MP3 input.**

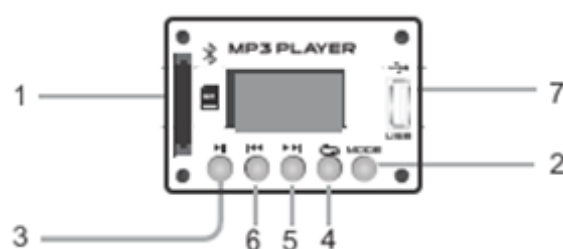 

Remote control

1	Play/Pause: Press to play a song or pause while playing a song.
2	In play mode press to set one equalizer mode.
3	Volume + /Volume -
4	Previous: Press once to return to previous song, press and hold to rewind.
5	Next: Press once to skip song, press and hold to fast-forward.
6	Keys: Use this key to select the number of a desired track.
7	Select song: Allows you to select the song you want to listen to direct, for example: if you want to hear the song no.11, first press the number 11, then press this button.
8	ENTER: Choose repeat mode.
9	Mode: Choose an operating mode. The available options are SD and USB.
10	Battery compartment (CR2025).

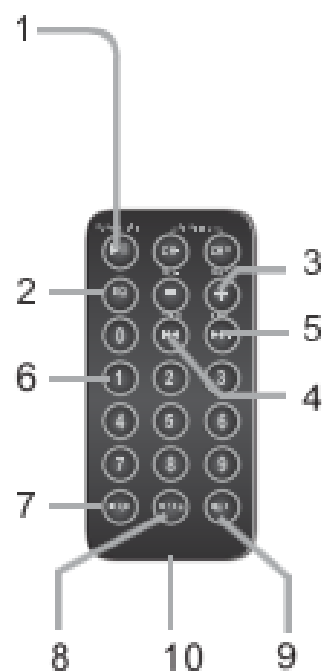 

Bluetooth Connection

To pair the speaker with a Bluetooth phone or audio device,

1. Press 'MODE' repeatedly on the MP3 player until select this mode.
2. Put your phone or device to be used in Bluetooth device discovery mode.
3. When your phone or device shows the "FDP12A/FDP15A" device, confirm the link.

To pair 2 speakers with Bluetooth with TWS (True Wireless Stereo) Playback, do the following:

1. The first time you use them switch them to Bluetooth mode, then do the following,
2. Pick one speaker as the master.
3. Press and hold the play/pause button on the control panel for 5 seconds to pair it with the other speaker.
4. You'll hear a "right channel" sound from the master speaker and a "left channel" sound from the other speaker once they're paired.
5. After that, you can use Bluetooth as usual, and the sound will come from both speakers.
6. When you turn off or change the play mode and switch back to Bluetooth, the two speakers will automatically pair for TWS playing.
7. The first time you pair them, you might hear some short "sa sa sa..." noise, but that's normal. If you turn off the master speaker, the TWS playing will stop.

Specifications

Part no	178.796FI	178.799FI
Model	FDP12A	FDP15A
Type	Active Speaker	Active Speaker
AC Input	AC220V, 50/60Hz	AC220V, 50/60Hz
Woofers	12inch	15inch
Voice Coil	3inch (75mm)	3inch (75mm)
Magnet	60Oz	60Oz
Sensitivity	122dB (+/-3dB)	128dB (+/-3dB)
Frequency Response	45Hz - 18KHz	45Hz - 18KHz
Tweeter	44mm	44mm
Power	300W	350W
Function	USB, SD, Bluetooth, TWS	USB, SD, Bluetooth, TWS
Remote Control	Yes	Yes