

INSTRUCTION MANUAL

FDP161A Column Speaker Set

Part Number 178.770FI



Introduction

Thank you for choosing the FiloPro FDP161A Column Speaker Set. To make the most of its features, please read this manual thoroughly before use.

Please ensure that you read the manual thoroughly before using the product. Adhere to the instructions to avoid invalidating the warranty. Take all necessary precautions to prevent fire and electrical shock. Repairs should only be conducted by a qualified technician to avoid electrical shock. Retain this manual for future reference.

- Prior to usage, please consult a specialist.
- It is normal for a smell to occur when the device is first switched on.
- Do NOT open the housing under any circumstances.
- To prevent shock and malfunction, avoid contact with metal objects or liquids.
- Keep the device away from heat sources and vibrating surfaces.
- Ensure that ventilation holes are not obstructed.
- The device is not intended for continuous use.
- Handle the mains lead with care to avoid damage and shock.
- Always pull the plug, not the lead, when unplugging.
- Do not plug or unplug the device with wet hands.
- Replace damaged plugs or leads with the assistance of a qualified technician.
- If internal parts are visible, do NOT plug in or switch on the device; contact your dealer.
- Avoid exposure to rain and moisture to prevent fire and shock hazards.
- Repairs should only be conducted by a qualified technician.
- Connect the device to an earthed mains outlet (220-240Vac/50Hz) with a 10-16A fuse.
- Unplug the device during thunderstorms or when not in use for extended periods.
- Allow the unit to reach room temperature before switching it on if it has been unused for a long time.
- Do not use the device in humid rooms or outdoors.
- Avoid repeatedly switching the device on and off.
- Keep the device out of reach of children and do not leave it unattended.
- Do not use cleaning sprays on switches; seek specialist advice in case of malfunction.
- Do not force the controls.
- Keep speakers at least 60cm away from computers or TVs.
- If the device has fallen, have it checked by a qualified technician before use.
- Clean the device only with a dry cloth.
- Keep the device away from electronic equipment that may cause interference.
- Use only original spare parts for repairs.
- Switch off the device before unplugging and disconnect all leads and cables before moving it.
- Ensure that the mains lead is not damaged by foot traffic.
- Check the mains lead for damage before each use.
- The mains voltage is 220-240Vac/50Hz; ensure compatibility when traveling.
- Retain the original packing material for safe transport.

Package Contents

- FDP161A active subwoofer
- FDP161A column speaker
- IEC power lead
- User manual

Unpacking Instructions



Carefully unpack the box upon receipt. Ensure all parts are present and in good condition. If any parts appear damaged or the package shows signs of mishandling, notify the shipper immediately and retain the packaging material. Save the package and all packaging materials. If the product needs to be returned, it is important to use the original factory box and packaging. If the device has been exposed to drastic temperature fluctuations (e.g., after transportation), do not switch it on immediately. Allow the device to reach room temperature to avoid condensation damage.

Caution

Ensure the mains voltage matches the label on the product. Using a different voltage may cause damage. Connect directly to the mains without a dimmer or adjustable power supply.



Always connect the device to a protected circuit (circuit breaker or fuse) and ensure it is properly grounded to prevent the risk of electrocution or fire.

Additional Notes

- Operate the device in rooms with temperatures between 5°C (41°F) and 35°C (95°F).
- Dispose of electrical products at designated recycling centers.
- Specifications may vary slightly and are subject to change without notice.
- Do not attempt repairs or modifications, as this will invalidate the warranty.
- FiloPro is not liable for injuries or damages resulting from misuse or disregard of warnings.


Symbols and Certifications



This symbol alerts users to the presence of high voltages inside the housing, which are powerful enough to pose a risk of electric shock.

Rear Panel

1	Input 1 Combo Socket, 6.3mm or XLR
2	Input 1 Selector Switch MIC/Line
3	Input 1 Volume Control
4	Input 1 Echo Control
5	Input 1 Bass Control
6	Input 1 Reble Control
7	Input 2 Combo Socket, 6.3mm or XLR
8	Input 2 Selector Switch MIC/Line
9	Input 2 Volume Control
10	Input 2 Echo Control
11	Input 2 Bass Control
12	Input 2 Reble Control
13	Input 3 Combo Socket, 6.3mm or XLR
14	Input 3 Selector Switch MIC/Line
15	Input 3 Volume Control
16	Input 3 Echo Control
17	Input 3 Bass Control
18	Input 3 Reble Control
19	Reverb
20	Aux In, RCA
21	Aux Volume
22	DSP Control, Select and Enter
23	DSP Control, Back
24	USB Input
25	Media Payer, Pause/Play
26	Media Player, Mode, Bluetooth or USB
27	Media Player, Repeat
28	Media Player, Previous/Volume Down (Long Press)
29	Media Player, Next/Volume Up (Long Press)
30	Media Player, TWS/Bluetooth Connect
31	Screen Display
32	Mix Output, XLR

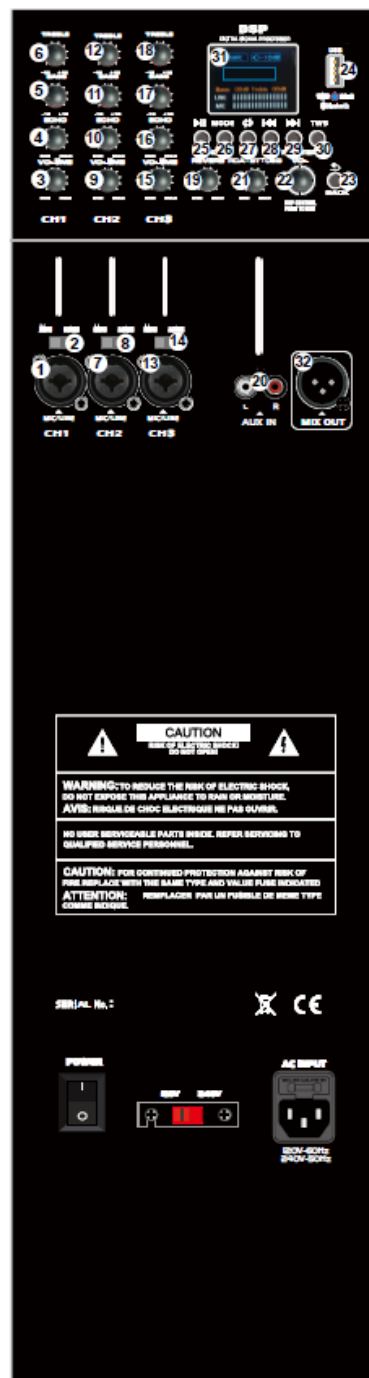

Specification

Part Number	178.770FI
Model	ADP161A
Column drivers	3" neodymium x16
Sub driver	12" x 18" neodymium
Amplifier	Class D
Power Rating	800x400W
Enclosure	Moulded Cabinet

Height	206cm
Weight	25.8kg
Power Supply	230Vac, 50Hz (IEC)
Inputs	Mic/Line(XLR/Jack) x 3 and Line (RCA)
Outputs	XLR
DSP	Yes