 


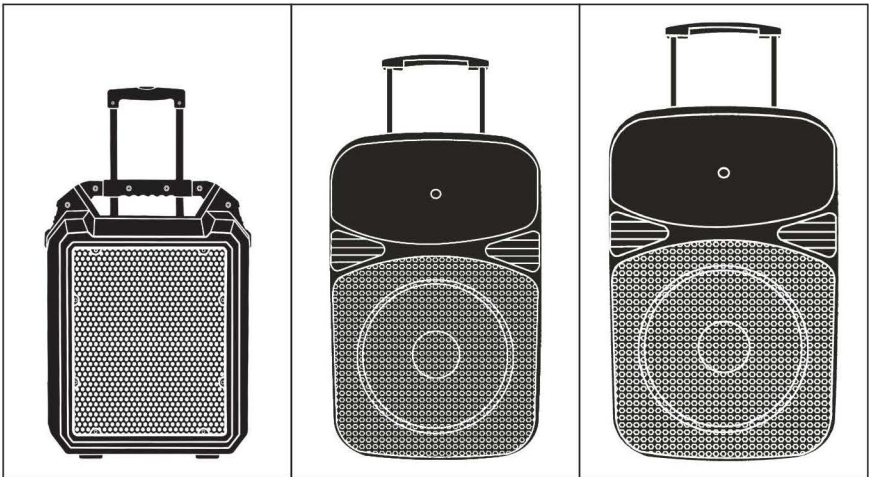

*FCH-10A*  
*FCA12PA*  
*FCA15PA*

**PROFESSIONAL SOUND  
10"/12" /15" 2-WAY MOLDED  
LOUDSPEAKER**

**User's Manual**





*FCH-10A*  
*FCA12PA*  
*FCA15PA*

## 1.Packing Contents

- 1×speaker
- 1×remote control
- 1×user’s guide
- 1 ×power cable

 
## 2.Specifications

MODEL	FCH10A	FCA12PA	FCA15PA
<b>Type</b>	ACTIVE SPEAKER	ACTIVE SPEAKER	ACTIVE SPEAKER
<b>Input</b>	AC100-240V, 50/60Hz DC12V, or Battery	AC100-240V,50/60Hz, DC12V,or battery	AC100-240V,50/60Hz, DC12V,or battery
<b>Woofers</b>	10 inch	12 inch	15 inch
<b>Voice coil</b>	1.5" (38mm)	1.5"(38mm)	1.5"( 38mm)
<b>Magnet</b>	30 Oz	30Oz	40Oz
<b>Sensitivity</b>	93dB(+/-3dB)	91dB(+/-3dB )	93dB(+/-3dB )
<b>Frequency response</b>	50Hz-20KHz	20Hz- 20kHz	20Hz- 20kHz
<b>Tweeter</b>	25mm	25mm	25mm
<b>Power</b>	80W	80W	100W
<b>Function</b>	USB, SD, FM, Bluetooth	USB,SD,FM,Bluetooth	USB,SD,FM,Bluetooth
<b>Remote control</b>	YES	YES	YES
<b>Battery capacity</b>	12V, 5Ah	12V,5AH	12V,7AH
<b>UHF wireless mic</b>	NA	2UHF(863.1/864.5MHZ)	2UHF(863.1/864.5MHZ)



**FCH-10A**  
**FCA12PA**  
**FCA15PA**


### 1. Player controls

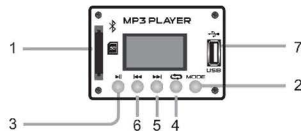

1. **SD card slot** : Use it to insert a SD card with Mp3 files.
2. **Model** : Select an operating modality ,the options are SD, USB, FM.
3. **Play /Pause** : Press to play a song or pause while playing a song.
4. Press once to select a player mode , the options are:
  - One : Select this to play current song indefinitely.
  - All : With this option you can repeat all music.
5. **Next/Volume +**:Press once to jump next song /press and hold to raise the volume level.
6. **Previous /Volume-**: Press once to jump previous song/Press and hold fo diminish the volume level.
7. USB input with Mp3 file.

### Conection Bluetooth

 
- 1.To pair the speaker with a Bluetooth phone or audio device, press“MODE” repeatedly on the MP3 player until select this mode.
2. Put your phone or device to be used in Bluetooth device discovery mode.
- 3.When your phone or device shows the “BLUETOOTH” device, confirm the link.

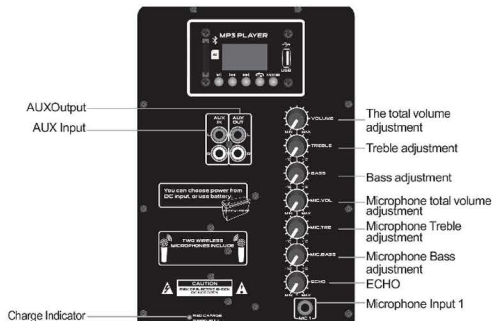



**FCH-10A**  
**FCA12PA**  
**FCA15PA**

## 6. Remote control

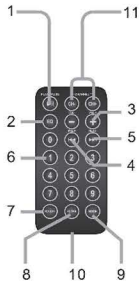 

**1.** Press to play a song or pause while playing a song .Program radio FM stations.

**2.** In play mode press to set one equalizer mode.

**3.** Vol+ /Vol-

**4. Previous:**Press once to jump previous song , press and hold to rewind.

**5. Next :**Press once to jump next song,press and hold to fast-froward .

**6.Keys :**Use this key to select the number of a desired track.

**7.Pick song :**Allows you to select the song want to listen to so direct, for example; if you want to hear the song no.11, first press the number 11 then press this buton.

**8.ENTER :** Choose repeat mode.

**9.MODEL :**Select an operating modality ,the options are SD/USB.FM radio and AUX.

**10.**Battery compartment ( CR2025)

**11.**select a FM frequency.

## 7.Caution

- Avoid exposing the speaker box to moisture. If they are set up outdoors, Be sure they are under cover.
- Do not use or store the equipment near wet or damp places. It may cause A malfunction or shock hazard.
- If the power cord is broken, it must be replaced by the manufacturer Or service agent or qualified personnel to avoid risks.
- To reduce the risk of fire or electric shock, do not expose this equipment to Rain or moisture.
- Clean only with a soft, dry cloth.