



BEAMZ
MADE
EAZY

156.019_156.020 V2.1

NOVA80B

QUICK START GUIDE

CONTROL MENU

MENU		DESCRIPTION	
Addr	1-512	DMX address	
chnd	14ch	DMX channel	
	10ch		
AUto	1	SP0-31	Speed 0-31 for auto mode
	4		
SLAu	SLA	Auto or M/S mode	
SEt	nAst	Auto mode on/ off	
	rESt	The default values for rest	
	tEst	Self-check function when restart	
	Pan	Pan movement orientation	
	tILt	Tilt movement orientation	
	dISP	Display	
InFo	hArd	Hardware version	
	SoFt	Software version	
	hoUr	Boot time	
tEnP	Temperature (The fan works when the LED board reaches 56°C)		

DMX CHANNELS

10 CHANNELS

10 CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	PAN	000-255	Pan Movement
2	TILT	000-255	Tilt Movement
3	PAN/TILT SPEED	000-255	Pan/Tilt Movement
4	PRISM	000-010	Prism Off
		011-179	Prism Position Selection
		180-199	Prism On, No Rotation
		200-255	Prism On, Speed by CH7
5	PRISM SPEED	000-255	Speed for Prism, fast to slow
6	STROBE	000-010	Default
		011-025	Light Off
		026-057	Random Strobe
		058-089	Ramp down from slow to fast
		090-121	Ramp up from slow to fast
		122-153	Ramp down to Ramp up
		154-209	Strobe 1
		210-255	Strobe 2
7	MASTER DIMMER	000-255	Master Dimmmer 0-100%
8	GOBO	000-009	Gobo 1
		010-019	Gobo 2
		020-029	Gobo 3
		030-039	Gobo 4
		040-049	Gobo 5
		050-059	Gobo 6
		060-069	Gobo 7
		070-159	Gobo 8
		160-255	Auto Gobo Changing Slow to Fast (Speed)
9	COLOUR	000-009	Colour 1
		010-019	Colour 2
		020-029	Colour 3
		030-039	Colour 4
		040-049	Colour 5
		050-059	Colour 6
		060-069	Colour 7
		070-079	Colour 8
		080-099	Colour 7
		090-109	Colour 6
		110-119	Colour 5
		120-129	Colour 4
		130-139	Colour 3
		140-149	Colour 2
		150-179	Colour 1
		180-255	Auto Color Changing Slow to Fast (Speed)
10	RESET	000-200	No Function
		201-240	Reset Pan/Tilt
		241-255	No Function

14 CHANNELS

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	PAN	000-255	Pan Movement
2	PAN FINE	000-255	Pan Fine movement
3	TILT	000-255	Tilt Movement
4	TILT FINE	000-255	Tilt Fine movement
5	PAN/TILT SPEED	000-255	Speed for Pan/ Tilt
6	PRISM	000-010	Prism Off
		011-179	Prism Position Selection
		180-199	Prism On, No Rotation
		200-255	Prism On, Speed by CH7
7	PRISM SPEED	000-255	Speed for Prism, fast to slow
8	STROBE	000-010	Default
		011-025	Light Off
		026-057	Random Strobe
		058-089	Ramp down from slow to fast
		090-121	Ramp up from slow to fast
		122-153	Ramp down to Ramp up
		154-209	Strobe 1
		210-255	Strobe 2
9	MASTER DIMMER	000-255	Master Dimmmer 0-100%
10	GOBO	000-009	Gobo 1
		010-019	Gobo 2
		020-029	Gobo 3
		030-039	Gobo 4
		040-049	Gobo 5
		050-059	Gobo 6
		060-069	Gobo 7
		070-139	Gobo 8
		140-255	Auto Gobo Changing Slow to Fast (Speed)
11	COLOUR	000-009	Colour 1
		010-019	Colour 2
		020-029	Colour 3
		030-039	Colour 4
		040-049	Colour 5
		050-059	Colour 6
		060-069	Colour 7
		070-079	Colour 8
		080-099	Colour 7
		090-109	Colour 6
		110-119	Colour 5
		120-129	Colour 4
		130-139	Colour 3
		140-149	Colour 2
		150-179	Colour 1
		180-255	Auto Color Changing Slow to Fast (Speed)
12	EFFECT	000-007	No Function
		008-019	Auto 1
		020-039	Auto 2
		040-059	Auto 3
		060-079	Auto 4
		080-099	Auto 5

		100-119	Auto 6
		120-139	Auto 7
		140-159	Auto 8
		160-179	Auto 9
		180-199	Auto 10
		200-210	Auto 11
		211-220	Auto 12
		221-255	Auto 13
13	EFFECT SPEED	000-255	Effect speed
14	RESET	000-200	No Function
		201-240	Reset Pan/Tilt
		241-255	No Function







BEAMZ

YOUR FUTURE
YOUR SKILLS
YOUR PLATFORM
YOUR PARTY
YOUR EVENT



is a leading developer of lighting products, including intelligent DMX moving heads, wireless battery operated DMX effects, static washes, sound-activated club effects, strobes & blacklights, LED lighting, fog and special effects machines, lasers and indoor and outdoor architectural lighting, as well as lighting controllers and protective bags.



BEAMZLIGHTING.COM